

How to run IRRICAD inside AutoCAD Civil 3D

1. Run Civil 3D from the desk top icon.

Set the Configuration


First the Support File Search Path and Trusted Locations must be set to include the IRRICAD Link folder.

2. Enter CONFIG into the command line and press <Enter>.
3. On the Files tab highlight “Support File Search Path” and then click the [Add] button and then the [Browse] button. Locate the folder that contains the BRX/ARX file, typically located in C:\Program Files\Irricad\Irricad Link xx.
4. Repeat step 2 for the “Trusted Locations” options, which will you find further down in the Files list.

Load the IRRICAD Link App

Now load the app:-

5. In the command line enter APPLOAD.
6. Browse for the Irricad.arx in the installed IRRICAD Link folder, commonly located in C:\Program Files\Irricad\Irricad Link xx. Click the [Load] button.
7. Once the app has been loaded – it will tell you if it is successful/unsuccessful – close the dialog.

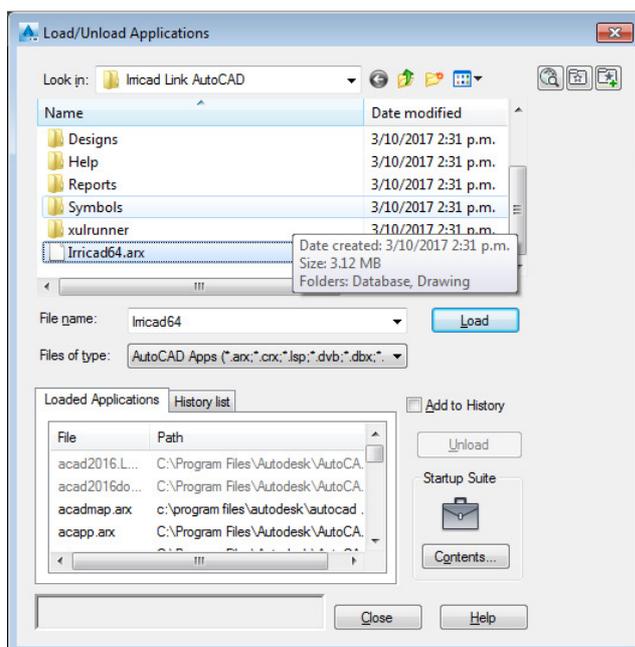


8. You should also receive a message to check if you always want to load this file – click Yes or Always Load.


Load the CUI File

Now the partial IRRICAD CUI file can be loaded into the selected Work Space:-

9. In the top left panel click on the “Load” icon.

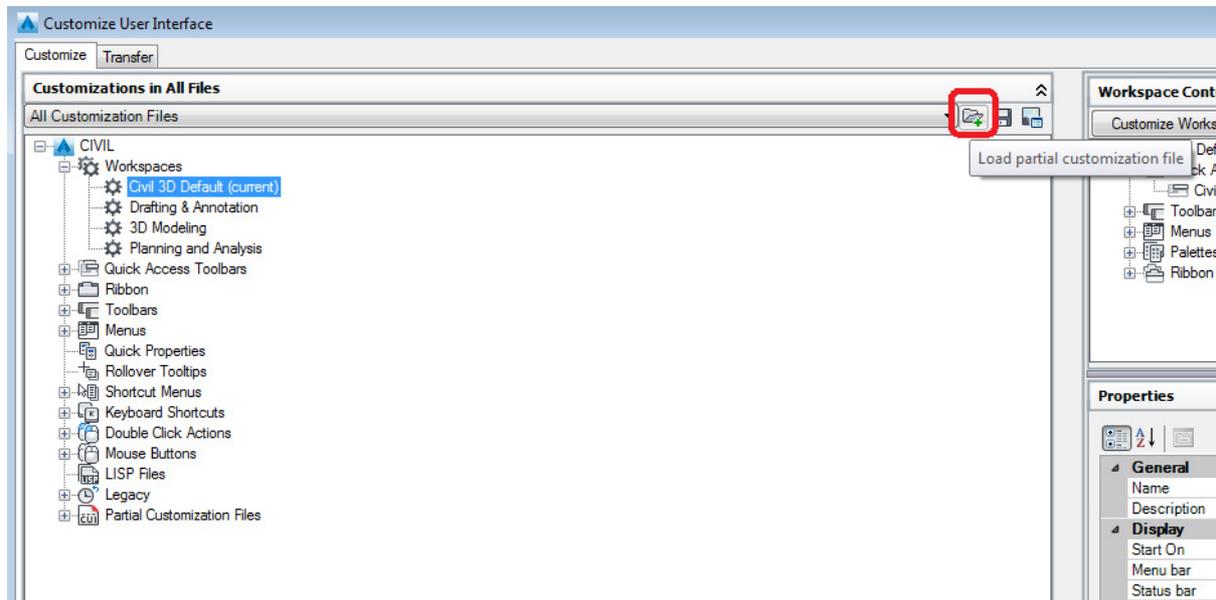

10. Browse for and select the IrricadAcadCUI.cuix file from the Support folder, commonly located in C:\Users\\AppData\Roaming\Autodesk\C3D xxxx\enu\Support.

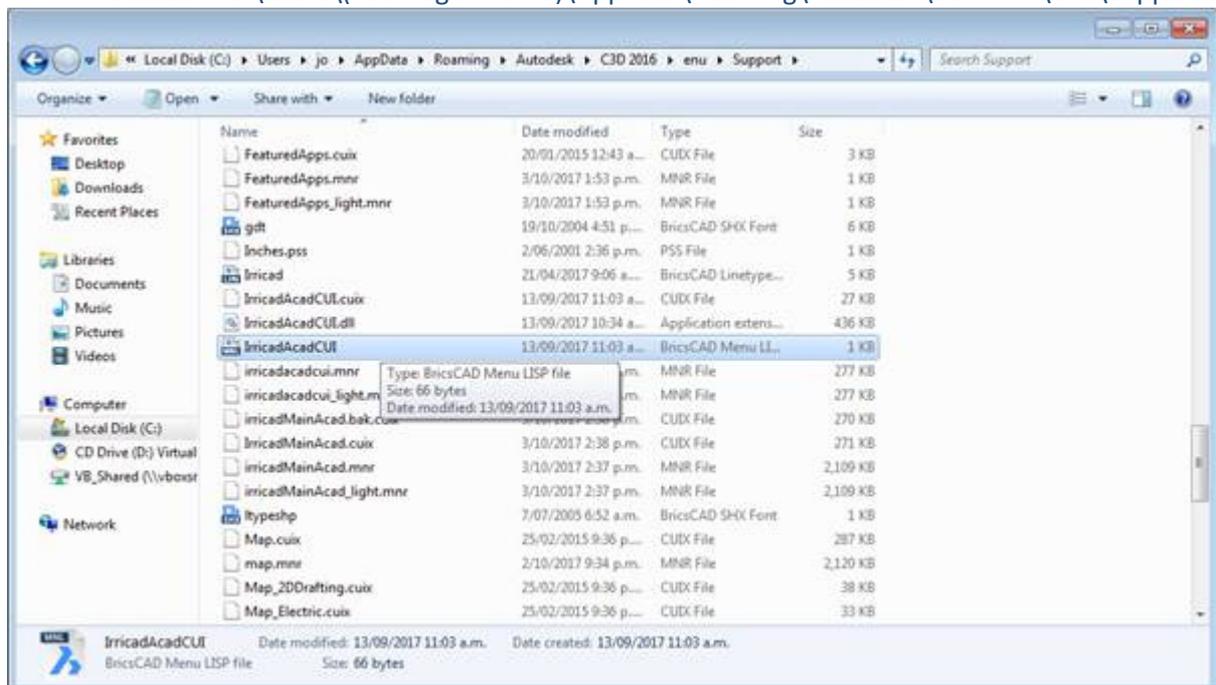

11. Make any changes as required and Apply and OK the dialog.
12. In the command line enter WSAUTOSAVE to save your CUI/Workspace changes.